


iruCarry 取扱説明書

iruCarry は、サドルと後輪の間に吊り下げて荷物の自重そのもので支える、着脱式のリアキャリアです。

各部の名称

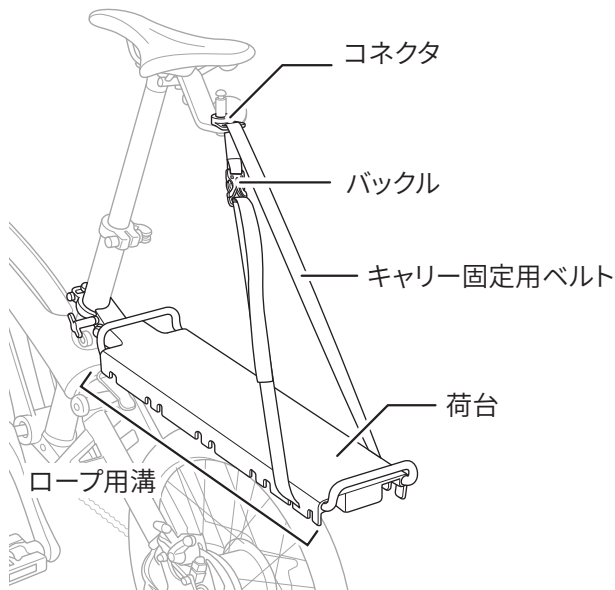

- 別売りのカプラーを取り付けることで iruka 以外の小径自転車でも iruCarry を取り付けることができます。カプラーはレール幅 44mm（芯間距離±1mm 程度の許容あり）のサドルに対応しています。

同梱物


- ・取扱説明書（本紙）・クランプ面保護テープ

仕様

サイズ	W130mm x L600mm x H67mm
適応シートポスト径	26 ～ 36mm
最大積載量	5kg


取り付け方

- 1 取付金具をシートポストに取り付けます。

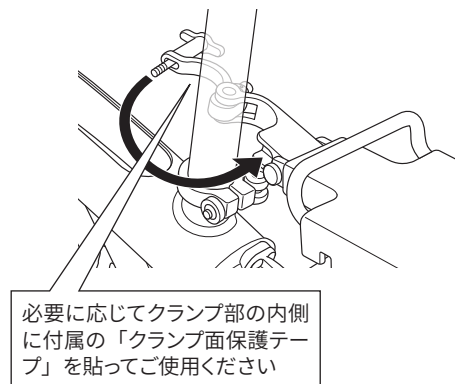


サイズ調整ボルトについて

取り付けるシートポストの太さに応じてサイズ調整ボルトを回して径を調整してください。

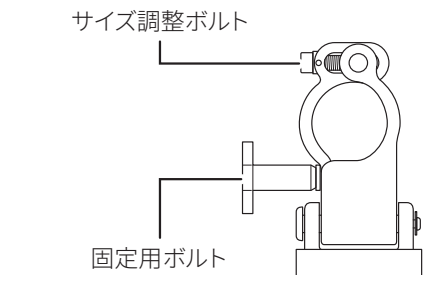


- 2 固定用ボルトを手で時計回りに回して締めます。

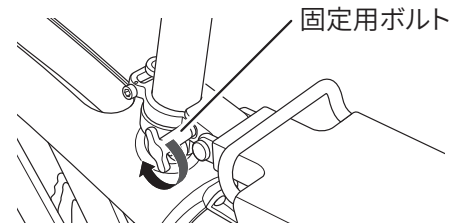

- 取り外すときは、固定用ボルトを反時計回りに回して緩めてください。

- 3 iruCarryのベルトのコネクタをカプラーに差し込みます。

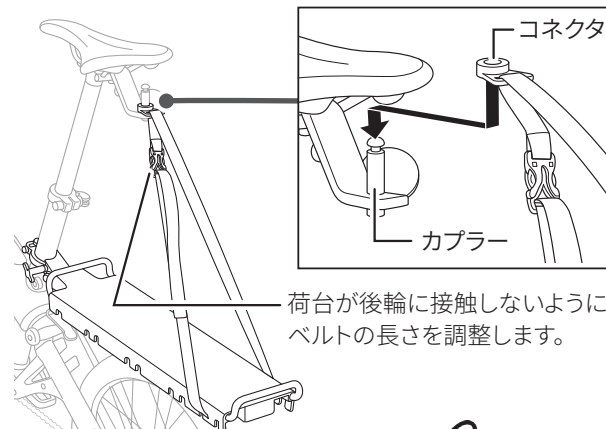


株式会社イルカ（iruka Inc.）

〒150-0001 東京都渋谷区神宮前 3-18-6 ストーリア神宮前 211
info@iruka.tokyo

iruCarry User's Manual

Part names

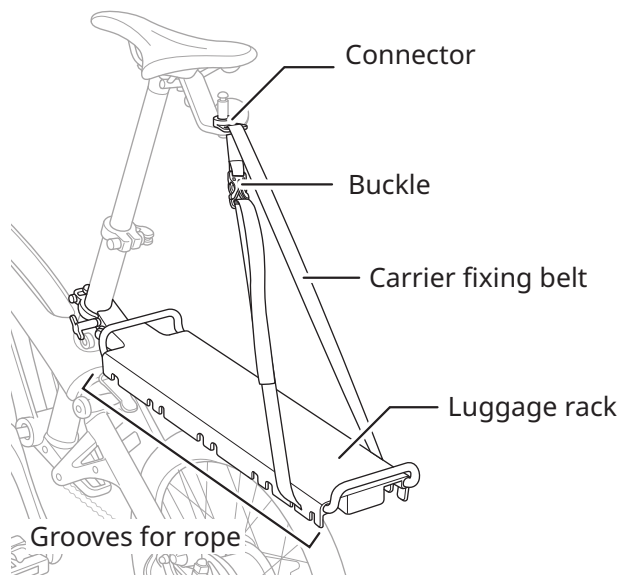

- By attaching a separately-sold coupler, iruCarry can also be attached to a small-wheel bicycle other than iruka. The coupler is suited to a saddle with a rail width of 44 mm (tolerance of approx. ± 1 mm between-center distance).

Included items

- This User's Manual, clamp protective tape


Specifications

Size	W130 mm x L600 mm x H67 mm
Compatible seat post diameter range	26 to 36 mm
Max. load capacity	5 kg

iruCarry is a detachable rear carrier for your bicycle suspended between the saddle and rear wheel and supported with the weight of the luggage it carries.


How to attach

- 1 Attach the mounting bracket to the seat post.

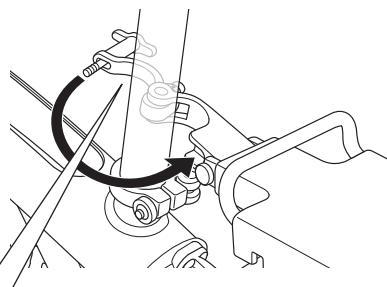


Where necessary, attach the clamp protective tape (included) to the inside of the clamp.

- 2 Turn the fixing bolt clockwise with your hand to tighten.

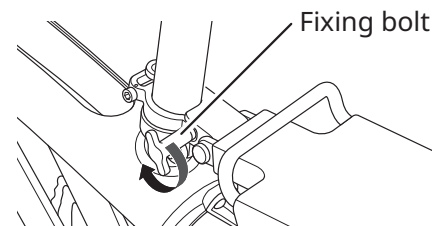

- When removing, turn the fixing bolt counterclockwise to loosen.


- 3 Insert the connector for the iruCarry belt into the coupler.

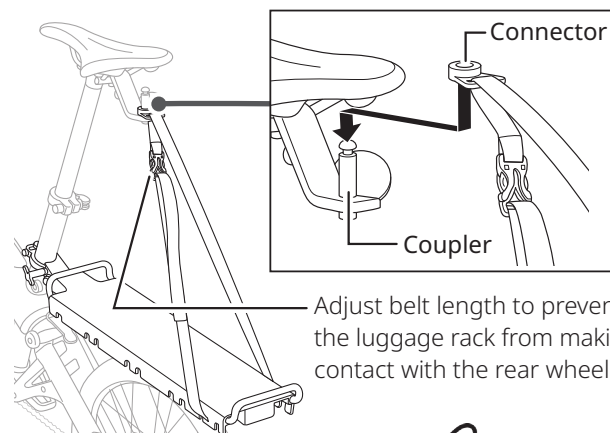

Size adjustment bolt

Turn the size adjustment bolt to make the diameter the right size for the thickness of the seat post iruCarry is being attached to.

Size adjustment bolt

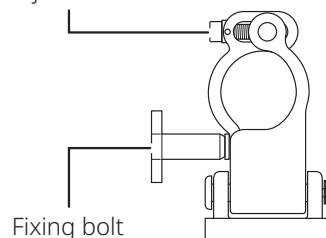

Fixing bolt



iruka Inc.

3-18-6 #211 Jingumae, Shibuya, Tokyo 150-0001, Japan
info@iruka.tokyo